

TUSKBOND

GC22

Gun Cleaner

TECHNICAL DATA SHEET

- Simple, Fast & Convenient Prevents Blockages
 - Prolongs Life Of Gun And Hose System

DESCRIPTION:

Tuskbond GC22 is a blend of organic solvents designed to quickly remove uncured adhesive from canister hoses and guns.

Tuskbond GC22 is designed to be used with the Tuskbond Canister Cleaning Assembly to give a simple, fast and convenient method of cleaning out canister hoses and guns; thus preventing blockages and prolonging the life of the system.

TECHNICAL SPECIFICATION:

PROPERTY TUSKBOND GC22

Solvent Acetone
Propellant Hydrocarbon

Colour Clear

STORAGE & SHELF LIFE:

Protect from extremes of temperature in a controlled environment between 15 and 35°C, and away from direct sunlight. Stored under the correct conditions, in original, unopened contain- ers, the product will have a shelf life of 12 months.

NOT ALLOW THE PRODUCT TO FREEZE





TUSKBOND

GC22

Gun Cleaner

TECHNICAL DATA SHEET

DIRECTIONS FOR USE:

- Before attaching the assembly ensure the main valve / tap of the canister is turned off.
- Attach the assembly to the tap on the canister ensuring the nut on the assembly is tightly applied and the rest of the assembly is pointing upright whilst tightening.
- Attach the canister hose to the front adaptor on the assembly tightly again ensuring the rest of the assembly is pointing upright whilst tightening.
- Apply a Tuskbond GC22 Gun Cleaner aerosol to the assembly by screwing the adaptor ring on the aerosol into the red adaptor on the assembly. N.B. Check the red tap on the assembly is in the horizontal (off) position before applying the Tuskbond GC22 Gun Cleaner aerosol.

- Turn the red tap on the assembly to the on (Vertical) position to release the Tuskbond GC22 Gun Cleaner into the hose.
- Aim the gun into a waste container and apply pressure to the trigger on the gun to push the Tuskbond GC22 Gun Cleaner through the hose and gun until the solvent starts to push the product through. Keep pressure on the trigger until you are satisfied the hose and gun are thoroughly clean.
- After use turn the red tap on the assembly to the horizontal (off) position and remove the Tuskbond GC22 Gun Cleaner gerosol.
- The assembly can be left attached between uses providing the red tap is in the horizontal (off) position.

DISCLAIMER:

All the information in the Data Sheet is based on practical experience and is published in good faith. However, because we have no control over the manner or conditions in which our products are used, or over work undertaken or end product manufactured by the purchaser, we cannot accept liability for results. Responsibility for ascertaining the suitability of products for his purposes rests with the purchaser. All conditions, representations, statements, warranties or guarantees whatsoever, whether express, implied or statutory, in respect of any goods manufactured, sold or supplied by us are hereby expressly excluded and we accept no liability in respect of any claim for damage or consequential loss caused to any property arising directly or indirectly out of the use of our products or goods.

